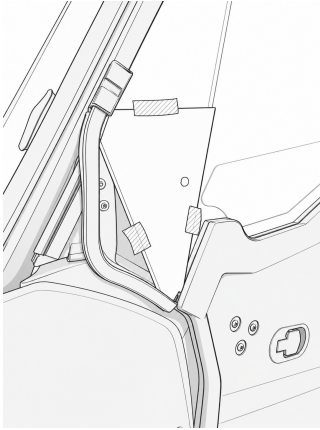
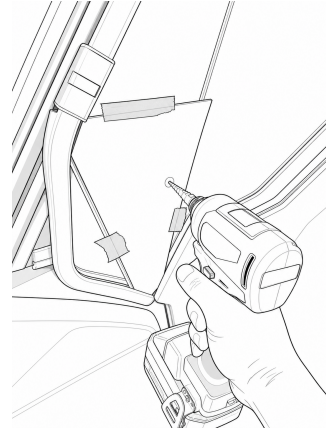


PRINT PAGE 2 AT ACTUAL SIZE / 100%


Verify the 1 in check square and 9 7/16 in overall template height before cutting or drilling.

1 POSITION AND TAPE

Cut out the template and fit both long edges against the upper-door bends. Printed side is DRIVER; flip it for PASSENGER. Secure with painter's tape.

2 CONFIRM AND DRILL

Check behind the panel for clearance. Wear eye protection. Keep the drill perpendicular and drill slowly at the marked center with a step drill.

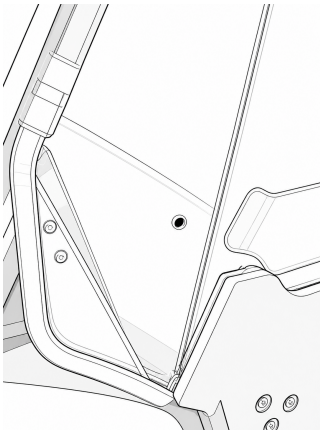3 SIZE THE HOLE

Use the mirror manufacturer's required diameter. Enlarge only as needed - typically 8-10 mm. Stop and test-fit often for a clean hole.

4 INSTALL AND REPEAT

Remove tape and drilling chips. Install the mirror per its instructions without overtightening. Flip the template and repeat on the other door.

IMPORTANT Verify template alignment and mirror clearance before drilling. Modification is permanent.

